

6.5 Loading and Installing Firmware

[Tutorial on how to load firmware and fpga image for usrp210](#)

Link for firmware:

http://www.ettus.com/downloads/uhd_images/UHD-images-most-recent/

```
sudo ldconfig
```

```
sudo ifconfig eth0 192.168.10.1
```

```
sudo apt-get install python python-tk idle python-pmw python-imaging
```

```
sudo /home/pellis/uhd/host/utils/usrp_n2xx_net_burner_gui.py
```

[Tutorial on how to load firmware and fpga image for usrp2](#)

```
sudo apt-get install python python-tk idle python-pmw python-imaging cd (where  
card_burner.py is)
```

```
sudo ./usrp2_card_burner.py --dev=/dev/sdd -
```

```
    fpga=/home/pellis/Desktop/firmware/images/usrp2_fpga.bin
```

```
sudo ./usrp2_card_burner.py --dev=/dev/sdd -
```

```
    fw=/home/pellis/Desktop/firmware/images/usrp2_fw.bin
```